

SOUND SYSTEM – CLC



SPEAKERS


- Turn on the two speakers in the front of the room. The green light will turn on.
- DO NOT TURN DIALS OTHER THAN THE ON/OFF SWITCH.



POWER STRIP (above)

MIXER BOARD

- Turn on the mixer board in the sound room (located upstairs) by turning the power strip ON. The power strip is located behind the mixer board.
- DO NOT SWITCH THE ON/OFF SWITCH ON THE MIXER BOARD.
- Cordless mic is #7 (pulpit microphone is also marked.)

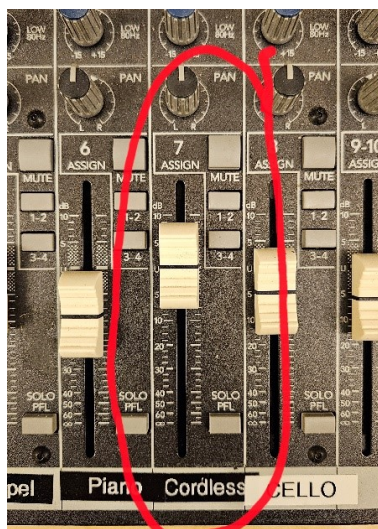

MIXER BOARD (above)

- The MUTE button must be in the OFF position. The MUTE button is located above the word "MUTE." It is in the OFF position when it is up.



**MUTE BUTTON
(above)**

- Volume may be adjusted as needed, but probably won't need to be.



MICROPHONE

- There are two switches on the **cordless microphone**. The POWER switch must be in the ON position (the green light will come on). The ON switch must be ON and not on mute. You can mute it when not in use.
- There is no ON/OFF switch for any other microphone. They will always be “live” as long as they are unmuted on the mixer board.



PROBLEM SHOOTING

- The phantom power on the mixer board **MUST** be on. Please do not turn this off. If you have done everything else and there is no sound, check to make sure the phantom power is ON on the mixer board.
- Is the power on?
- Are the speakers turned on?
- Is the MUTE button turned off?

PLEASE TURN OFF WHEN FINISHED!